



**PISTOL CZ 999, 9 mm PARA  
EXPLODE PART VIEW**

[www.zastava-arms.rs](http://www.zastava-arms.rs)

| No. | Part number | Part name               |
|-----|-------------|-------------------------|
| 1   | 106301      | Front sight             |
| 2   | 106302      | Rear sight              |
| 3   |             | Frame,ins.assy          |
| 4   | 114334      | Screw holder            |
| 5   | 106307      | Lever holder            |
| 6   | 114336      | L.H. Lever              |
| 7   | 114337      | R.H.Lever               |
| 8   | 106311      | L.H.Lever spring        |
| 9   | 106312      | R.H.Lever spring        |
| 10  | 106313      | Slide stop              |
| 11  | 106314      | Slide stop spring       |
| 12  | 114338      | Trigger lever,ins. assy |
| 13  | 106318      | Lever spring            |
| 14  | 111152      | Trigger                 |
| 15  | 106320      | Trigger axle            |
| 16  | 114340      | Locking insert          |
| 17  | 106322      | Sear,ins.assy           |
| 18  | 106323      | Sear spring             |
| 19  | 114342      | Sear axle               |
| 20  | 106325      | Spring limiting shaft   |

| No. | Part number | Part name               |
|-----|-------------|-------------------------|
| 21  | 114343      | Triggering lever        |
| 22  | 114383      | Hammer,ins.assy         |
| 23  | 106330      | Hammer axle             |
| 24  | 114347      | Hammer spring           |
| 25  | 114348      | Spring guide            |
| 26  | 114335      | Rest                    |
| 27  | 106336      | Rest spring             |
| 28  | 106337      | Rest axle               |
| 29  | 114395      | Ejector                 |
| 30  | 106339      | Magazine catch          |
| 31  | 110942      | Magazine release button |
| 32  | 106341      | Magazine catch spring   |
| 33  | 114386      | Magazine catch axle     |
| 34  | 114384      | Barrel link             |
| 35  | 114351      | L.H. cover              |
| 36  | 114352      | R.H. cover              |
| 37  | 114353      | Cover screw             |
| 38  |             | Slide                   |
| 39  | 114396      | Extractor               |
| 40  | 106354      | Firing pin              |

| No. | Part number | Part name               |
|-----|-------------|-------------------------|
| 41  | 106357      | Firin pin lock          |
| 42  | 106358      | Lock spring             |
| 43  | 106381      | Barrel                  |
| 44  | 114366      | Recoil spring guide     |
| 45  | 106355      | Lock                    |
| 46  | 106356      | Firing pin spring       |
| 47  | 114367      | Recoil spring           |
| 48  | 120030      | Magazine body           |
| 49  | 106367      | Follower spring         |
| 50  | 114370      | Follower                |
| 51  | 106369      | Magazine bottom lock    |
| 52  | 106371      | Magazine bottom         |
| 53  | 106344      | Loaded chamb. indicator |
| 54  | 106362      | Lock                    |
| 55  | 106345      | Spring                  |
| 56  | 106350      | Axle                    |